

MOKA™ Originals

LELO ORIGINALS

g-spot vibrator

MOKA™ Originals is a refined G-spot vibrator from the new LELO Originals line, crafted for customers seeking versatile internal and external stimulation. Its slim, gently curved shape and flattened tip allow for targeted pleasure—ideal for G-spot massage, clitoral stimulation, or a combination of both. MOKA™ offers a sleek design, intuitive functionality, and the high-quality performance expected from LELO, making it a strong fit for premium sexual wellness assortments.



BLENDED ORGASMS

MOKA™ Originals offers a true meaning of pleasure with the option of both clitoral and g-spot stimulation.



4 POWERFUL PLEASURE SETTINGS

MOKA™ Originals offers 4 different vibration patterns, varying in intensity from a teasing murmur to a satisfying pulse.



4 EXCLUSIVE APP SETTINGS

In addition to the four basic ones available without the app, you can unlock an additional four, consisting of two regular and two advanced modes - Finish Me Off and Out of Control.



USB RECHARGEABLE & FULLY WATERPROOF TO IPX7 STANDARD

Enjoy unlimited climaxes anytime and anywhere, including the bath or the shower.



SUBLIME DESIGN FOR PRECISE PLEASURE

The flattened tip is ideal for channeling the deep and powerful vibrations during G-spot massage.



AVAILABLE COLORS:



MOKA™ Originals

Purple

Product ID: A0254

EAN: 7350167260254

SPECIFICATIONS:

Material: Body-safe silicone, ABS plastic

Finish: Smooth

Size: 192 x 76 x 37 mm / 7.6 x 3 x 1.5 in

Insertable length: 116 mm / 4.6 in

Weight: 100 g / 3.5 oz

Battery: Li-Ion 200 mAh

Charging: up to 2 h at 5 V 200 mA

Rated power:

- Input: 5 V 200 mA 1 W

- Output: 3.7 V 200 mA 0.74 W

User time: Up to 2 h

Standby: at least 90 days

Frequency: 93 Hz

Max. noise level: ≤ 63 dB

Interface: 3 buttons and 2 LEDs

SHIPPING AND PACKAGING DETAILS:

Packaging box size: 78.7 x 50 x 206 mm / 3.1 x 2 x 8.1 in

Shipping box: 585 x 355 x 260 mm / 23 x 13.9 x 10 in

Units per final shipping box: 42

USING YOUR MOKA™ Originals

LELO Originals have app lock to ensure your device is genuine, up-to-date, and safe to use. Once you unlock the device, you can choose whether to use the app or not.

WITH THE LELO™ app

- Charge your MOKA™ Originals for 2 hours before first use
- Download the LELO™ app for [iOS](#) or [Android](#), or scan the QR code on the box
- Press the power button **(M)** on the device — the LED will blink (pairing mode)
- Once you register and sign in the LELO™ app, choose the Originals series and connect your device
- Press the power button **(M)** again to confirm pairing
- Your device is now unlocked and ready to use with the app

Features in the app:

- 8 modes total (4 standard + 4 extra inside the app). Go to **Settings** to adjust modes and other preferences
- Tap **Save** to store your settings for offline use
- Set auto power-off to 10–20 minutes in the drop-down menu
- Battery level shows in the upper-left corner of the app

For more information about the LELO™ app, use the detailed instruction manual located [HERE](#).

WITHOUT THE LELO™ app

- Charge for 2 hours before first use
- You still need to unlock the device via the LELO™ app when you use it for the first time (see steps above)

Once unlocked:

- Press **+** to turn it on
- Press **(M)** to change modes
- Use **+** and **-** to adjust intensity
- Press and hold **(M)** to turn off the device

Travel Lock

- Press and hold **+** and **-** buttons simultaneously for 3 seconds to lock or unlock the device for travel