

NEA™ Originals

LELO ORIGINALS

personal clitoral massager

NEA™ Originals is an app-connected clitoral massager from the versatile LELO Originals collection, designed with discretion and ease of use in mind. Compact yet powerful, its elegant shape makes it an excellent choice for newcomers and more experienced users. Whether you're just beginning to explore or looking to enrich your intimate moments, NEA™ Originals offers a gentle invitation to discover what feels good on your own terms.



TRAVEL READY

Compact and discreet design allows your NEA™ Originals to always be by your side, wherever you go.



4 POWERFUL PLEASURE SETTINGS

NEA™ 3 Originals offers 4 different vibration patterns, varying in intensity from a teasing murmur to a satisfying pulse.



4 EXCLUSIVE APP SETTINGS

In addition to the four basic ones available without the app, you can unlock an additional four, consisting of two regular and two advanced modes - Finish Me Off and Out of Control.



USB RECHARGEABLE & FULLY WATERPROOF TO IPX7 STANDARD

Enjoy unlimited climaxes anytime and anywhere, including the bath or the shower.



AVAILABLE COLORS:



NEA™ Originals
Purple
Product ID: A0186
EAN: 7350167260186

USING YOUR NEA™ ORIGINALS

LELO Originals have app lock to ensure your device is genuine, up-to-date, and safe to use. Once you unlock the device, you can choose whether to use the app or not.

WITH THE LELO™ app

- Charge your NEA™ Originals for 2 hours before first use
- Download the LELO™ app for [iOS](#) or [Android](#), or scan the QR code on the box
- Press the + button on the device — the LED will blink (pairing mode)
- Once you register and sign in the LELO™ app, choose the Originals series and connect your device
- Press the + button again to confirm pairing
- Your device is now unlocked and ready to use with the app

Features in the app:

- 8 modes total (4 standard + 4 extra inside the app). Go to **Settings** to adjust modes and other preferences
- Tap **Save** to store your settings for offline use
- Set auto power-off to 10–20 minutes in the drop-down menu
- Battery level shows in the upper-left corner of the app

For more information about the LELO™ app, use the detailed instruction manual located [HERE](#).

WITHOUT THE LELO™ app

- Charge for 2 hours before first use
- You still need to unlock the device via the LELO™ app when you use it for the first time (see steps above)

Once unlocked:

- Press + to turn it on
- Double press + to change modes
- Use + and - to adjust intensity
- Press and hold - to turn off the device

Travel Lock

- Press and hold + and - buttons simultaneously for 3 seconds to lock or unlock the device for travel

SPECIFICATIONS:

Material: Body-safe silicone, ABS plastic

Finish: Smooth

Size: 74 x 39 x 34 mm / 2.9 x 1.5 x 1.3 in

Weight: 45 g / 1.6 oz

Battery: Li-Ion 300 mAh

Charging: up to 2 h at 5 V 300 mA

Rated power:

- Input: 5 V 300 mA 1.5 W
- Output: 3.7 V 200 mA 0.74 W

User time: Up to 2 h

Standby: at least 90 days

Frequency: 93 Hz

Max. noise level: ≤ 60 dB

Interface: 2 buttons and 2 LEDs

SHIPPING AND PACKAGING DETAILS:

Packaging box size: 70 x 40 x 122 mm / 2.8 x 1.6 x 4.8 in

Shipping box: 405 x 405 x 325 mm / 15.9 x 15.9 x 12.7 in

Units per final shipping box: 24