

SONA™ Originals

LELO ORIGINALS

Sonic Clitoral Massager

SONA™ Originals is a sonic clitoral massager designed for customers seeking a deeper, more satisfying intimate experience. Utilizing LELO's advanced SenSonic™ technology, it delivers resonant sonic waves that stimulate without direct contact, resulting in fuller and more intense orgasms. As part of the LELO Originals line, SONA™ offers a high-quality entry point into sexual wellness, making it a standout addition to any curated product selection.



SENSONIC™ TECHNOLOGY

This toy uses sonic pulses that resonate deep into the internal structure of the clitoris for an entirely new sensation.



4 POWERFUL PLEASURE SETTINGS

SONA™ Originals offers 4 different vibration patterns, varying in intensity from a teasing murmur to a satisfying pulse.



4 EXCLUSIVE APP SETTINGS

In addition to the four basic ones available without the app, you can unlock an additional four, consisting of two regular and two advanced modes - Finish Me Off and Out of Control.



USB RECHARGEABLE & FULLY WATERPROOF TO IPX7 STANDARD

Enjoy unlimited climaxes anytime and anywhere, including the bath or the shower.



AVAILABLE COLORS:



SONA™ Originals
Purple
Product ID: A0216
EAN: 7350167260216

USING YOUR SONA™ ORIGINALS

LELO Originals have app lock to ensure your device is genuine, up-to-date, and safe to use. Once you unlock the device, you can choose whether to use the app or not.

WITH THE LELO™ app

- Charge your SONA™ Originals for 2 hours before first use
- Download the LELO™ app for [iOS](#) or [Android](#), or scan the QR code on the box
- Press the power button on the device — the LED will blink (pairing mode)
- Once you register and sign in the LELO™ app, choose the Originals series and connect your device
- Press the power button again to confirm pairing
- Your device is now unlocked and ready to use with the app

Features in the app:

- 8 modes total (4 standard + 4 extra inside the app). Go to **Settings** to adjust modes and other preferences
- Tap **Save** to store your settings for offline use
- Set auto power-off to 10–20 minutes in the drop-down menu
- Battery level shows in the upper-left corner of the app

For more information about the LELO™ app, use the detailed instruction manual located [HERE](#).

WITHOUT THE LELO™ app

- Charge for 2 hours before first use
- You still need to unlock the device via the LELO™ app when you use it for the first time (see steps above)

Once unlocked:

- Press **+** or **(O)** to turn it on
- Press **(O)** to cycle through 4 modes
- Use **+** and **–** to adjust intensity
- Press and hold **(O)** to turn off the device

Travel Lock

- Press and hold **+** and **–** buttons simultaneously for 3 seconds to lock or unlock the device for travel

SPECIFICATIONS:

Material: Body-safe silicone, ABS plastic

Finish: Smooth

Size: 87 x 54 x 46 mm / 3.4 x 2.1 x 1.8 in

Weight: 68 g / 2.4 oz

Battery: Li-Ion 300 mAh 3.7 V

Charging: up to 2 h at 5 V 300 mA

Rated power:

- Input: 5 V 300 mA 1.5 W
- Output: 3.7 V 200 mA 0.74 W

User time: Up to 2 h

Standby: at least 90 days

Frequency: 103 Hz

Max. noise level: ≤ 70 dB

Interface: 3 buttons and 2 LEDs

SHIPPING AND PACKAGING DETAILS:

Packaging box size: 70 x 58 x 170 mm / 2.8 x 2.3 x 6.7 in

Shipping box: 600 x 400 x 200 mm / 23.6 x 15.7 x 7.9 in

Units per final shipping box: 48